


RETAINER ROD  
BEND TO FIT  
TIGHT TO FITTING

NOTE: ALL VERTICAL THRUST BLOCKS  
MUST BE FORMED AND POURED IN PLACE

GROUND

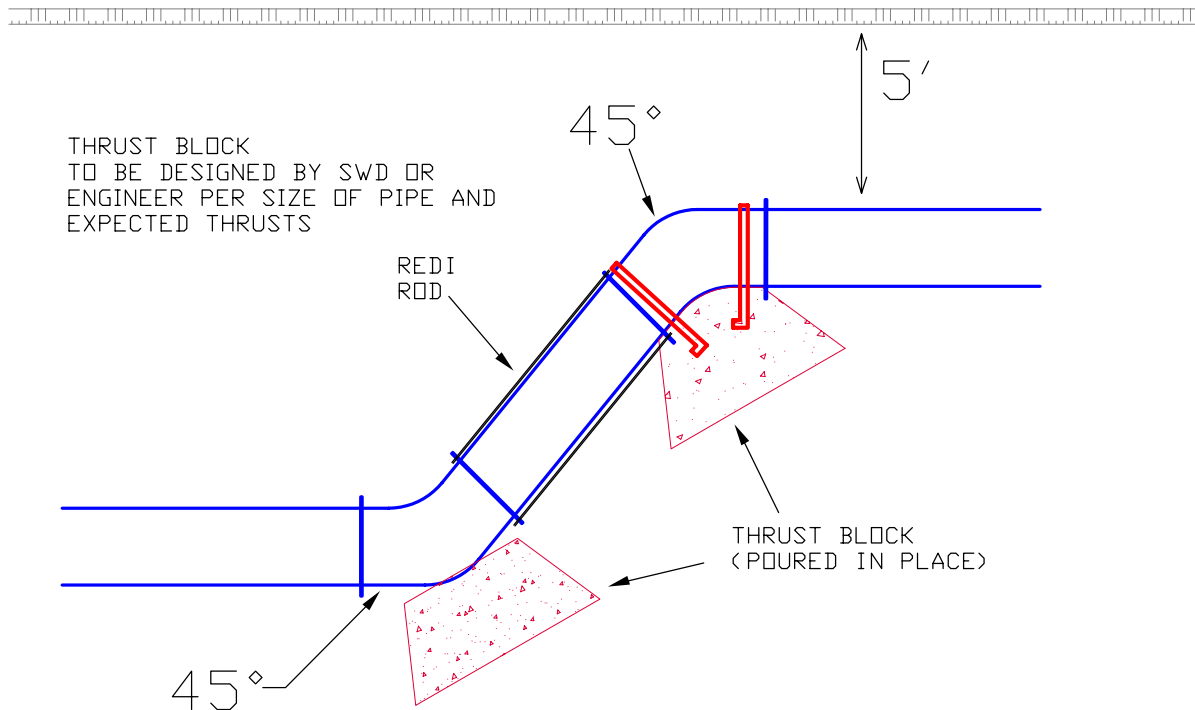

# HANGING THRUST BLOCKS

N. T. S.

