


THROUGH WALL

NOTE: ALL VERTICAL THRUST BLOCKS
MUST BE FORMED AND POURED IN PLACE

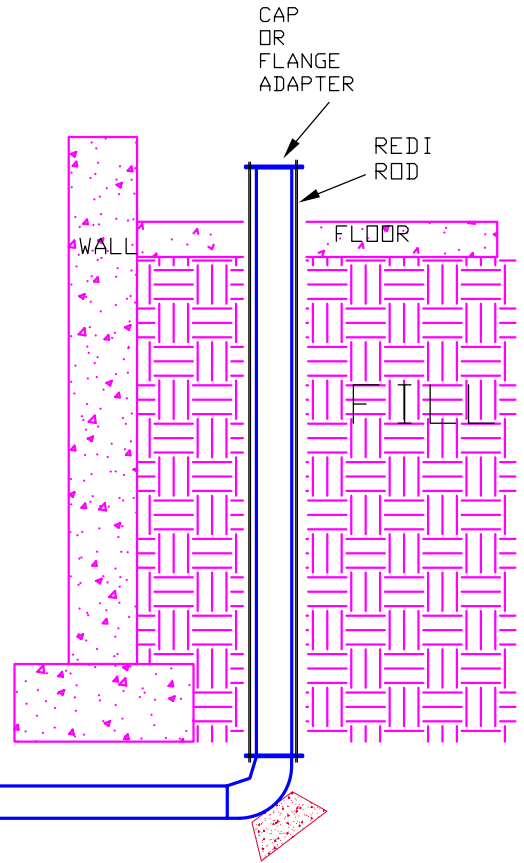

UNDER WALL FOOTER

N. T. S.

